

DEVICE SELECTION
Switch between control of your STB (set-top-box) and TV. **Remote must be in STB mode to control ACTV service.**

POWER
Turn on/off TV and place the remote in the proper mode to control the STB (set-top-box).

RCU SETUP
Used to program the remote.

DVR LIST
Digital Video Recorder

MENU
Display the menu and access system features.

DVR CONTROLS

GUIDE
View current and future ACTV programming. Remote must be in STB mode to access Guide.

INFO
Display channel name, channel number, current program, etc.

DAY +/-
Advance guide forward or back by the day.

DIRECTIONAL ARROWS
Navigate through guide and menus.

VOLUME +/-
Adjust TV volume.

OK
Makes your selection.

MUTE

EXIT
Returns to programming.

NUMERIC KEYPAD
Enter channel numbers or passwords.


CH +/-
View next or previous channels.


INPUT
Switch between your TV's connections. (Must press TV device button first.)


LAST
Return to previous channel.


CLOSED CAPTION

SHORTCUT BUTTONS


Current Programming


Help


Channel Guide


Previous Menu